 




TOOLS NEEDED

- Gloves (Recommended)

PARTS DEFINITIONS

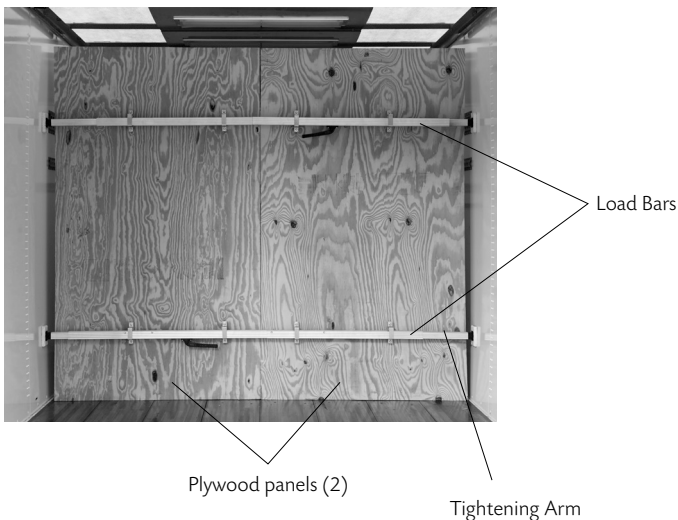

Bulkhead Panels: Two identical 4' x 8' plywood panels

Load bars: Aluminum bars mounted to the bulkhead panels

Black handle: Each load bar is equipped with a black pump handle that extends the load bar up to 8 inches for a secure fit. Always maintain proper handle orientation above or below the load bar to avoid damage to the handle or other cargo during transit.

Tightening arm: Retractable bar equipped with rubber pads used to secure the bulkhead to the trailer.

NOTE: Use and store the bulkhead panels in a dry place.

IMPORTANT:

Wear protective gloves while assembling and disassembling the bulkhead. We recommend two people set up and remove the bulkhead.

INSTALLING THE BULKHEAD

1. Lean the two bulkhead panels against the shipment.

NOTE: Install the bulkhead with the rubber pads facing the trailer walls so the tightening arms can press against the trailer.


2. Slide the load bars until they connect in the center. Do this for the top and bottom load bar.



3. Press the round silver button and extend to the end hole. Do this for the top and bottom load bars.

4. Stand the bulkhead upright against the shipment perpendicular to the trailer floor.

5. Pump the black handle until the rubber pads touch both trailer walls. Pump the handle an additional 10-12 times to secure the bulkhead inside the trailer. Do this for the top and bottom load bars.

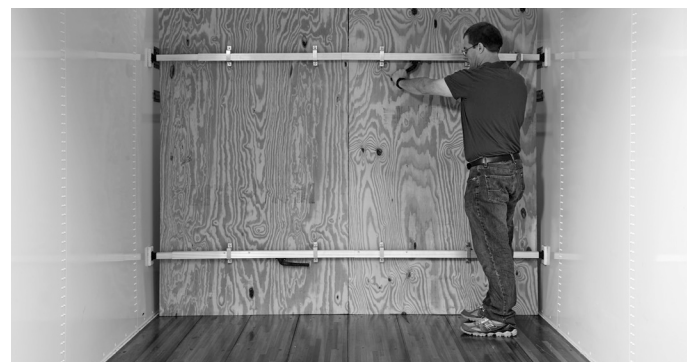

IMPORTANT:

Use caution when removing the bulkhead as items may have shifted during transit.

REMOVING THE BULKHEAD

1. Press and hold the red button to loosen the load bars.




2. While pressing the red button, compress the tightening arm into the load bar to continue loosening the load bars. Do this for the top and bottom load bars.

IMPORTANT:

The bulkhead is now loose.

3. Lean the bulkhead against the shipment by carefully moving the bottom of the bulkhead away from the shipment.
4. Press the round silver button and retract to storage position. Do this for the top and bottom load bars.
5. Slide the load bars until they separate in the center. Do this for the top and bottom load bar.

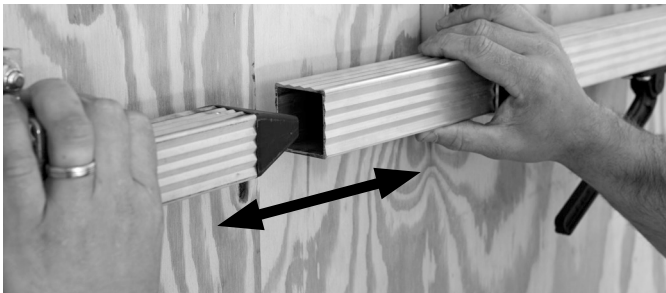

6. Remove the panels individually from the shipment and store the panels in a dry place.